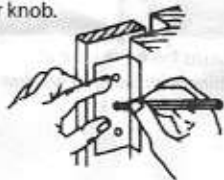
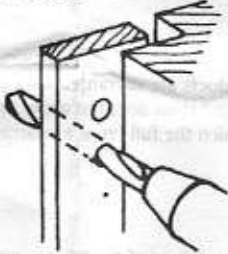
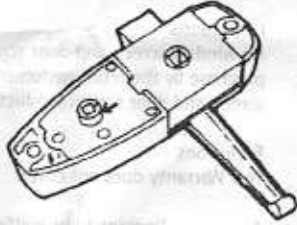
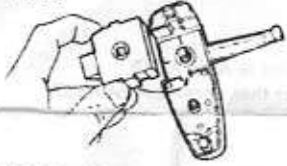
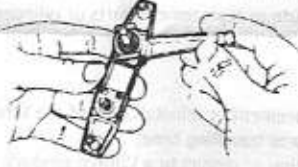
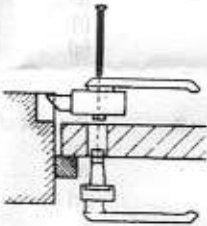


# HINGED SCREEN DOOR SAFETY LOCK

## FITTING INSTRUCTIONS

<p>1. With screen door closed, use template provided to mark hole positions at height to clear main door knob.</p>  <p><b>NOTE:</b> Hole positions must be accurate.</p>	<p>2. Drill 11mm holes straight through door.</p> 	<p>3. Ensure arrow matches dimple on back of body.</p> 
<p>4. Fit locking mechanism to inner handle.</p>  <p><b>NOTE:</b> Locking mechanism &amp; handle can be turned to suit either left or right hand inward or outward opening doors.</p>	<p>5. Place outer handle on door adjusting handle direction if necessary.</p> 	<p>6. Place inner handle &amp; mechanism on inside of door. Connect to outer handle with two metal thread screws.</p> 
<p>7. Rebate strike into door jamb ensuring bevel on strike faces bevel on tongue.</p> 