



# NCE SMART DTV USER MANUAL



12V / 240V

# Summary

---

<b>Caution</b>	<b>3</b>
<b>Safety Information</b>	<b>4</b>
<b>Accessories</b>	<b>5</b>
<b>Technical Specification</b>	<b>5</b>
<b>Controls on the TV</b>	<b>6</b>
<b>TV Input&amp;Outputs</b>	<b>7</b>
<b>REMOTE CONTROL FUNCTIONS</b>	<b>8</b>
<b>Getting started-Basic operations</b>	<b>11</b>
<b>INITIAL SETUP</b>	<b>12</b>
<b>HOME</b>	<b>16</b>
<b>SETTING</b>	<b>17</b>
<b>Channels&amp;Inputs</b>	<b>17</b>
<b>Network&amp;Internet</b>	<b>17</b>
<b>System</b>	<b>18</b>
<b>About</b>	<b>18</b>
<b>Factory reset</b>	<b>18</b>
<b>TV Source setting</b>	<b>18</b>
<b>Accounts &amp; Profiles</b>	<b>19</b>
<b>HOW TO RETUNE YOUR NCE GOOGLE TV</b>	<b>20</b>
<b>HOW TO STUCK IN ATV MODE ON YOUR NCE GOOGLE TV</b>	<b>24</b>

---

## Caution



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of un-insulated “dangerous voltage” within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to the persons.



The exclamation point within an equilateral triangle is intend to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



### Correct disposal of this Product

(Waste Electrical & Electronic Equipment (WEEE))

Your product is designed and manufactured with high quality materials and components which can be recycled and reused.

This symbol means that electrical and electronic equipment, at their end-of-life should be disposed of separately from your household waste.

Please dispose of this equipment at your local community waste collection/ recycling centre.



**Pb**

Please help us to conserve the environment we live in!



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

# Safety Information

To ensure reliable and safe operation of this equipment, please read carefully all the instructions in this user guide, especially the safety information below.

 
## Electrical safety

- The TV set should only be connected to a mains supply which matches that stated on the label on the mains adaptor.
  - To prevent overload, don't share the same mains supply socket with too many other equipment.
    - Do not place any connecting wires where they may be stepped on or tripped over.
    - Do not place heavy items on the leads, which may damage them.
    - Hold the Mains plug, not the wires, when removing from a socket.
    - During a thunderstorm or while leaving the TV for long periods, disconnect the aerial (if outdoor) and mains adaptor from the supply.
    - Do not allow water or moisture to enter the TV or mains adaptor. Do NOT use in wet or moist areas such as Bathrooms, steamy kitchens or near swimming pools.
  - Pull the plug out immediately, and seek professional help if:
    - the mains plug or cable is damaged.
    - liquid is spilt onto the set, or if it is accidentally exposed to water or moisture.
    - anything accidentally penetrates the ventilation slots.
    - the set does not work normally.
    - Do NOT remove the safety covers. There are no user serviceable parts inside. You may invalidate the warranty. Only qualified personnel are permitted to service this apparatus.
    - To avoid battery leakage, remove exhausted batteries from the remote control handset, or when not using for along period.
    - Do NOT break open or throw exhausted batteries on a fire.
- 


## Physical safety

- Do NOT block ventilation slots in the back cover. You may place the TV in a cabinet, but ensure at least 5cm (2") clearance all around the unit.
- Do NOT tap or shake the TV screen, you may damage the internal circuitry. Take good care of the remote control, do not drop it or allow it to come into contact with liquids.
- To clean the TV use a soft dry cloth. Do NOT use solvents or petrol based fluids. For stubborn stains, you may use a damp soft cloth with diluted detergent.


# Accessories

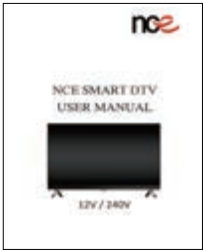

User's Manual

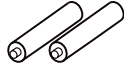 

x AAA batteries

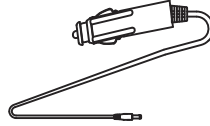 

Accessory Plug



TV stand installation



Power Adapter



Remote control



Warranty Card

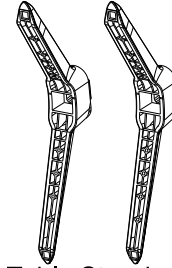 


Table Stands and Screws 2 pcs



Power cord

\* Note: The configuration of the components may look different from the following illustration.

All the pictures in this manual are for your reference, appearance and display should subject to the final product. The user interface may vary due to software upgrades.


## Technical Specification

 ● Model	NCE32SMTGP
● TV System	PAL BG/DK/I SECAM BG/DK
● Screen Size	32" inch (diagonal)
● Resolution	1920X1080
● Antenna input	75 Ω (unbalanced)
● Audio output power	2 x 8 W
● Power Consumption	12 V  5 A 60 W

### Remote Control

Type	BT remote
Control distance	5m
Control angle	30°(horizontal)

## CONTROLS ON THE TV

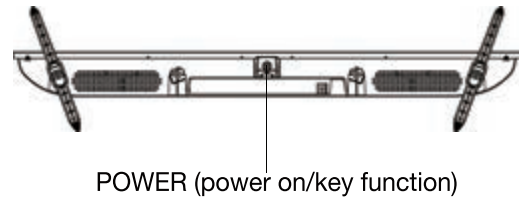


Power: Press this button to turn on the TV. Press it again to turn off the TV and put it in standby mode.

## INSTALLATION
 
### Wall-Mounting


This television set is equipped with VESA mounting points on the back panel for use with wall-mounting brackets (not included).

**NOTES:** The distance in width and height between the holes is 100x100mm

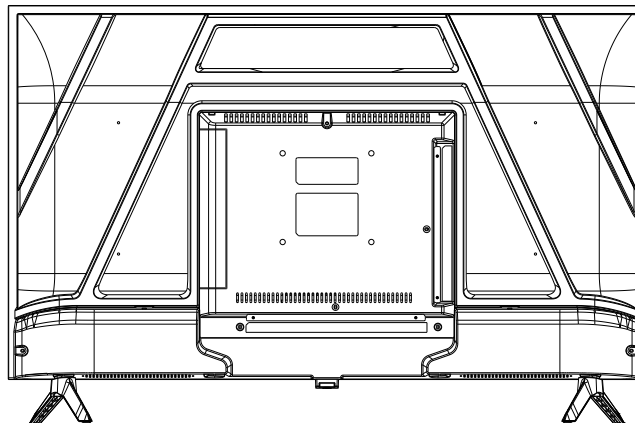

**It is recommended that this TV be removed from the wall bracket when the RV is in transit.**
 
## TV INPUT & OUTPUTS

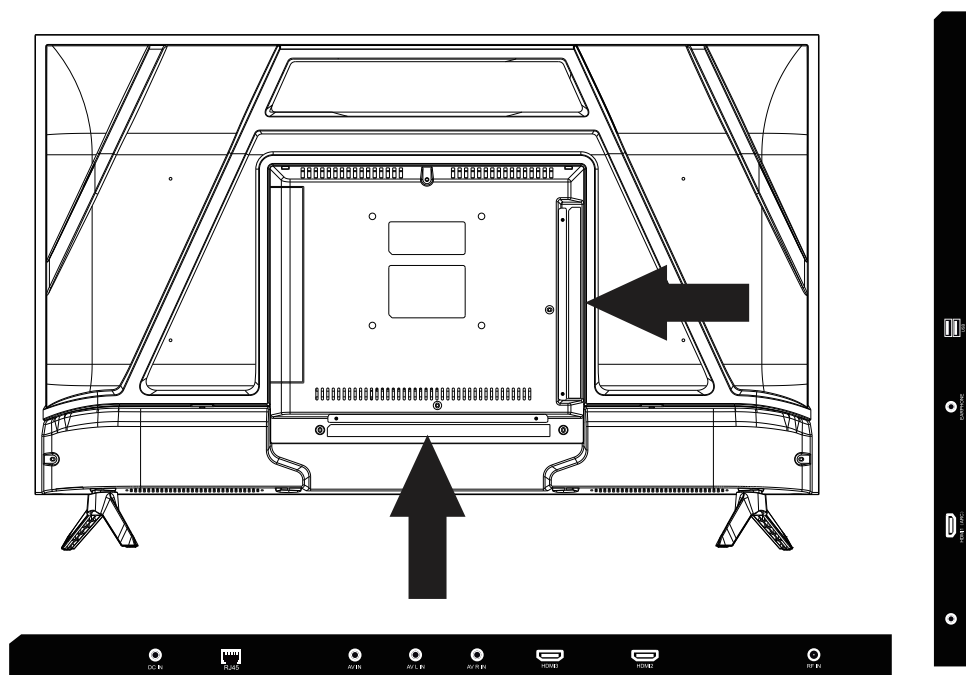


**NOTE:** Please, make sure the inputs and outputs have solid connections before connecting power.

1. DC IN: POWER (DC12V/24V or plugpack) input
2. RJ45 : For internet connection via a modem or router.
3. AV Input : Composite Video & Audio in (A/V)
4. HDMI 3 Input : HDMI in.
5. HDMI 2 Input : HDMI in.
6. RF Input(DVB-T2) : Connect to external antenna to receive DTV signal in DTV mode.
7. Optical Out : Digital Audio output for surround sound/sound bars etc.
8. HDMI 1 Input : HDMI in.
9. Headphone Jack : Headphone output jack.
10. USB : Use for mouse or keyboard connection; Install apps; For media playback when Media is the TV's selected source.



## REMOTE CONTROL FUNCTIONS

 - ① Switches the TV between on and standby mode.
- ② Indicator light
- ③ Mute or restore your TV sound.
- ④ **INFO:** Displays the present channel information such as the current time and channel name.
- ⑤ **Google Assistant:**  
Talk to Google to control your TV using your voice.
- ⑥ **Profiles:** Switch between profiles.
- ⑦ **Setting:** In the HOME page, this button is “Dashboar” function. On the Live TV, this button is “Menu” function.
- ⑧ **Navigation buttons:** Cursor UP/LEFT/RIGHT/DOWN.
- ⑨ **HOME:** Displays the home screen.
- ⑩ **Back:** Press to move back through menus.
- ⑪ **Live Guide:** Open the Live TV EPG.
- ⑫ **Inputs:** Display/Select signal source options.
- ⑬ **Audio:** Displays the Audio Language list and select an audio language or audio format if available (only applicable when the TV programme has this feature).
- ⑭ **NETFLIX:**  
Connects to NETFLIX for viewing online TV shows and films (internet connection required).
- ⑮ **YouTube:**  
Connects to YouTube (internet connection required).
- ⑯ **Prime video:**  
Connects to Prime video (internet connection required).
- ⑰ **Disney+:**  
Connects to Disney+ (internet connection required, some regions may not support it).
- ⑱ **USB:** Press to enter Multimedia Player.
- ⑲ **CC:SUBT:** Close Caption.
- ⑳ **TXT:** Press to enter Teletext when play the program.
- ㉑ **■/■** : Enter “■/■” for Sub-channel symbol (Ex:11. 1;11-1).

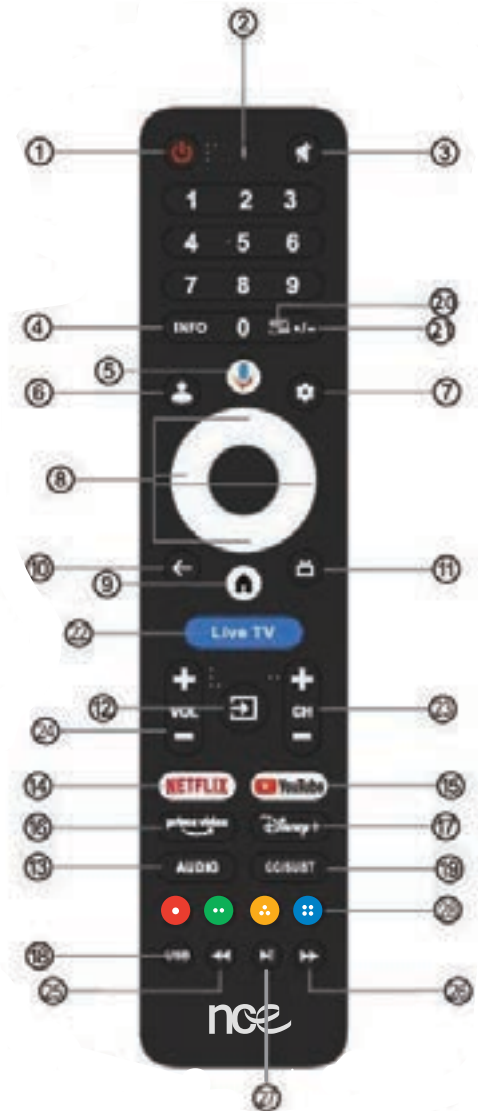

## REMOTE CONTROL BATTERIES AND RANGE

  - ②② **Live TV:** Open the Live TV
- ②③ **CH+/-:** Change program channel
- ②④ **VOL+/-:** Turn up/down the volume.
- ②⑤ **Fast backward:** Fast backward in multimedia.
- ②⑥ **Fast forward:** Fast forward in multimedia.
- ②⑦ **Play/pause:** Fast forward in multimedia.
- ②⑧ **Red/Green/Yellow/Blue:** Special function key. Used in uncertain special scenarios

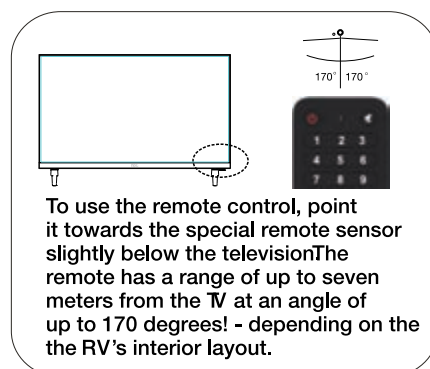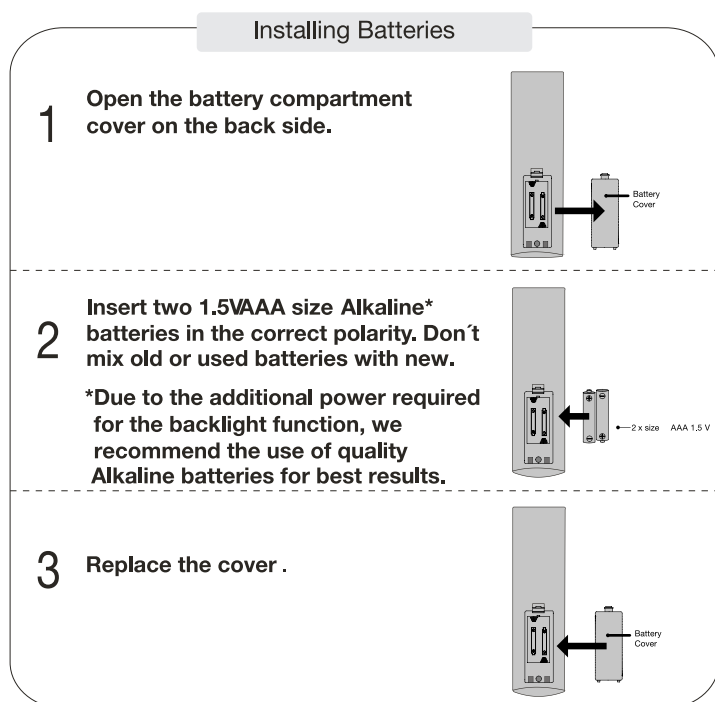

### Note:

- Batteries should not be exposed to excessive heat such as direct sunlight, fire or the like.
- If not being used for a period of time, please remove the batteries from the remote in case of leakage.
- Do not mix old & new batteries together.

## GETTING STARTED - POWER CONNECTION

### Power Connection Options

#### Power Adaptors

 
Your RV Media TV with USB functionality can operate from two different power sources allowing you to use your TV in a multitude of applications:

- Caravans, Campers & RV's
- Trucks (12V or 24V operation)
- Marine (12V or 24V operation)
- Store Demonstrations
- Home use
  - Kitchens
  - Bedrooms
  - Garage
  - PC Monitor
  - Security systems etc.

#### 12/24V operation

Your TV is supplied with a 12V style accessory lead (cigarette lighterplug) which can be connected to 12V or 24V sources. This power method also ensures that in 12V applications, your TV is protected from voltage spikes from Charges and Solar Systems etc up to 30V

Note this lead is also available as a spare part should you require a second power connection point or if it gets lost.

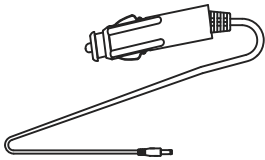

#### 240V Mains Operation

The TV can also operate on 240V with the supplied 240V power adaptor.



Note: If apply power suppliers, pls use 12v 5A adaptor

## GETTING STARTED - BASIC OPERATIONS

Make sure all necessary connections are correctly made before connecting the power adaptor and turning on the power. The power indicator on the TV will turn red to indicate it is in stand by mode.

### **power on/off**

Press  $\odot$ /I on the remote control to turn on TV. The power indicator will change from red(stand-by) to green (on).

To turn the TV off, press  $\odot$ /I The unit will revert to stand-by mode and the power indicator will turn red.

 
# 1. Initial Setup

---

For the first initial setup, the on-screen setup guide will guide you through setting up your TV. Please follow the guide to setup your TV correctly.


## 1.1 Pairing Bluetooth Remote

Press 'BACK' and 'Home' simultaneously on remote control to enter the Bluetooth pairing mode. The indicator light on remote control will flash when starting the pairing mode.

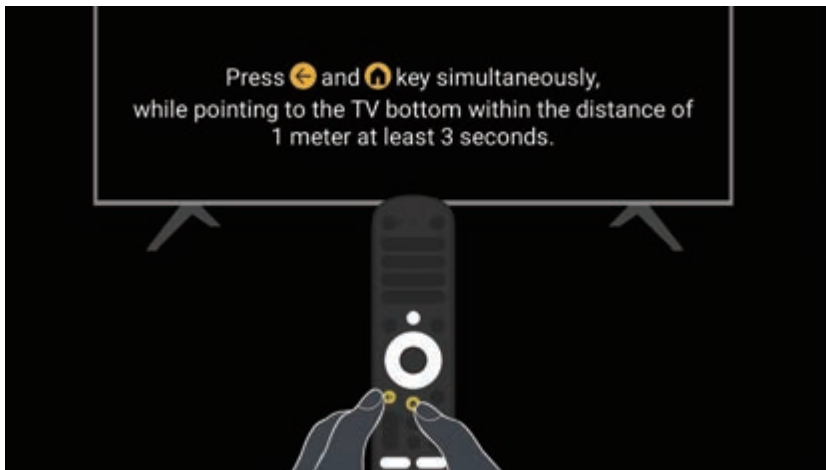


## 1.2 Language select

 Use ^/v buttons to select system languages, then press 【OK】 to confirm.

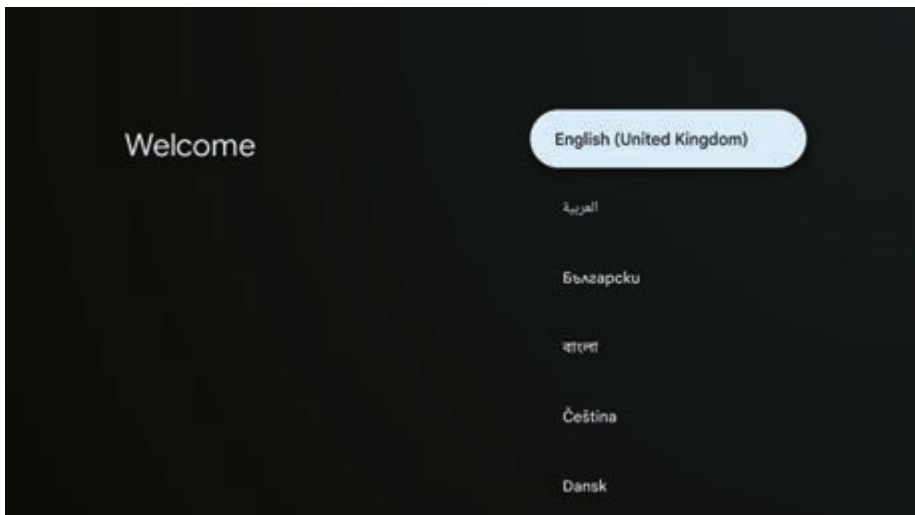

### 1.3 Select your region or country

 Use **▲/▼** buttons to select your region or country, then press **【OK】** to confirm.

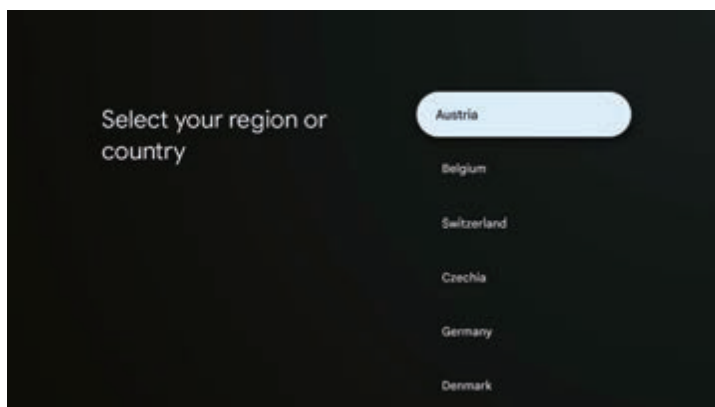

### 1.4 Set up Google TV™

Follow the instructions in the Google Home app.

 
Note: You may choose “Manual setup(with TV remote)”.

Not all countries support the Google Home app, and Setup code are different on different TV, Please refer to the actual software.




### 1.5 Select TV mode

Use **▲/▼** buttons to select TV mode, then press **【OK】** to confirm.

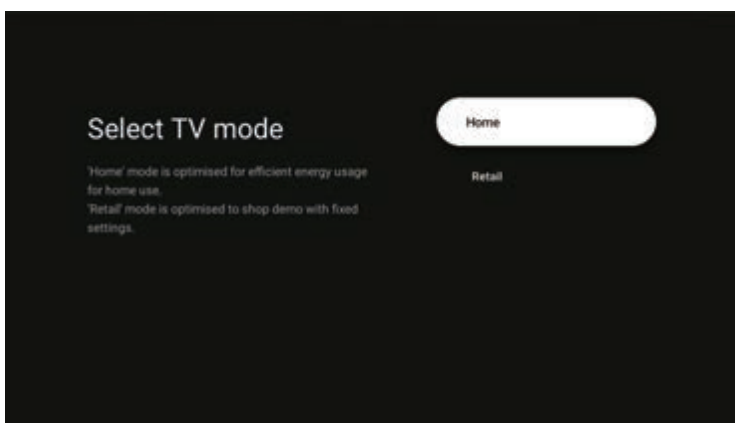


## 1.6 Configure the WIFI network

 Press **^/v** buttons to select Wi-Fi you wish to connect, enter the password, and then confirm to connect. If you select **“Skip”**, it could be performed in homepage or settings menu.

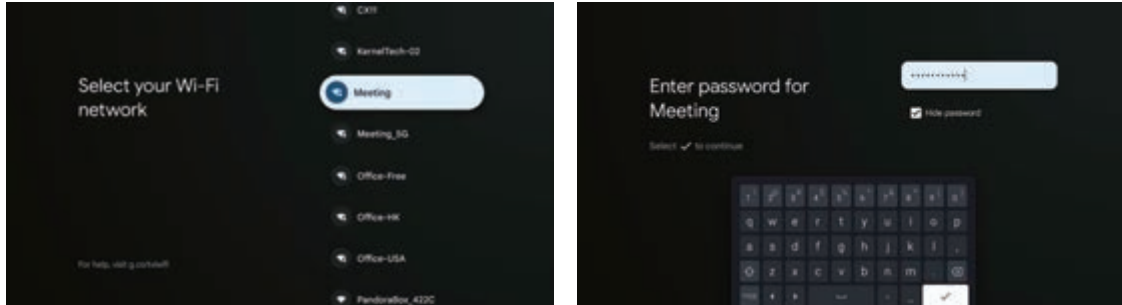


## 1.7 Terms of Service

 By accepting the Google Terms of Service to improve the product experience, select **“Accept”** to proceed with this condition.

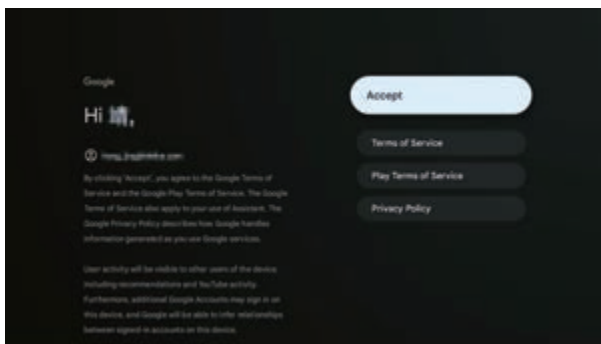


## 1.8 Google Services

 Select **“Accept”** to confirm if you want your location identified on your Google TV and agree to automatically send diagnostic information to Google to help improve your experience.

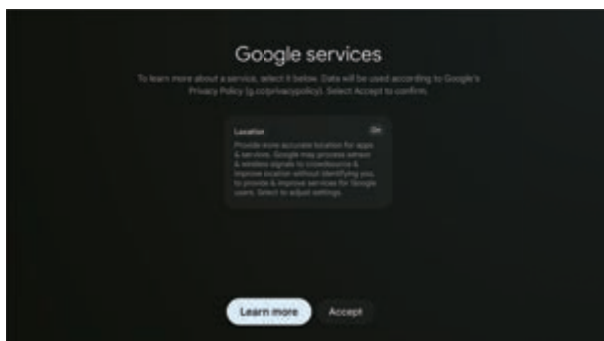

## 1.9 Select Time Zone

 
Press **▲/▼** buttons to select Time Zone, then press “OK” button to next page.

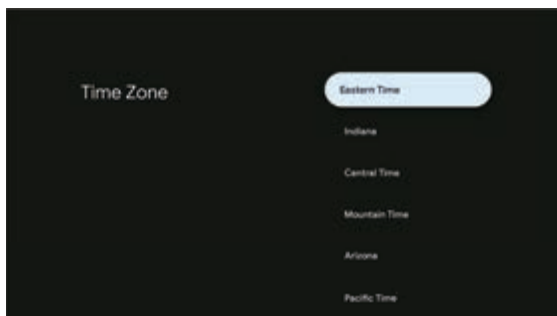

## 1.10 Turn Mode Setting


Select Antenna/Cable/Satellite to scan TV channel.

 If you select “Skip”, the channel scan could be performed in menu.

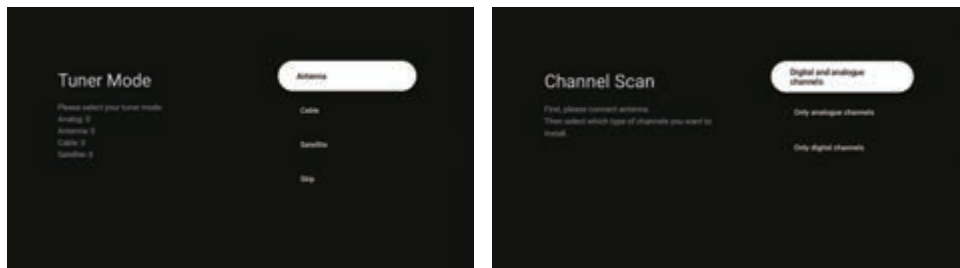

## 2. HOME

 Once you have completed initial setup, you will now enter the home by screen or press **1** button to display the homepage.

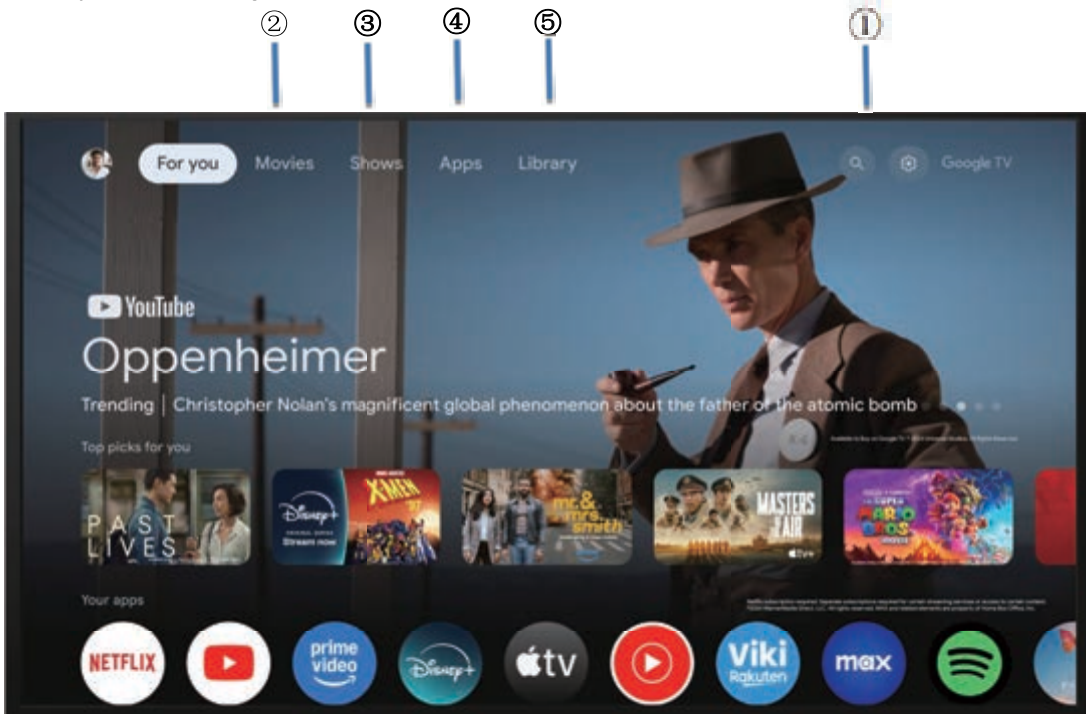

### ① Search

Use your voice to jump to shows, control devices, and more—just ask Google.

### ② & ③ Movies & Shows

Watch your favorite movies and shows or discover new favorites all in one place.

### ④ Apps

Download and access your favorite apps to discover movies, shows, games, and more.



### ⑤ Library

 
Keep all your shows and movies in a single watchlist. Add from your TV, phone, or browser - no matter which app its on.

## 3.Settings

---



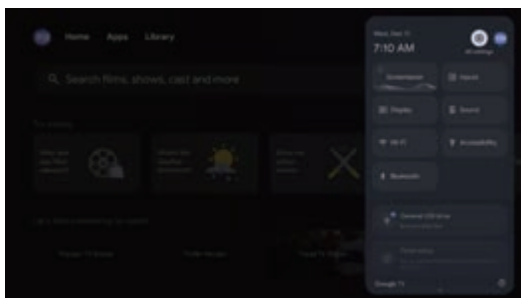

Allows to set various performance of your TV .


- 1.Press  button to select “Settings” which is in the upper right corner of the screen.
- 2.Press  button to select the option which you want to adjust in the Settings menu.
- 3.Press **【OK】** to enter.



### Channels and inputs



 Display the scan sub-menu based on different channel installation modes.

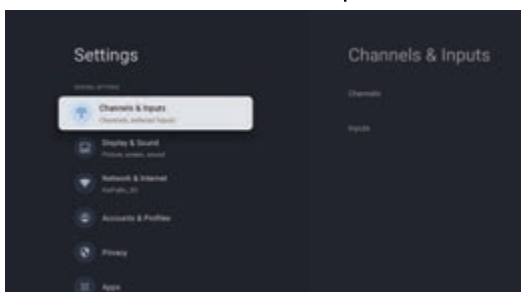
- 1.Press  button to select “Channel Source” & Inputs”.
- 2.Press **【OK】** to enter “Channels”, then press  choose Analog, Antenna, Cable etc to scan the channels.
- 3.Press  button to select “Inputs”, press **【OK】** to enter “Inputs”, then press  choose HDMI1, HDMI2, HDM3, Composite etc.



### Network & Internet

 Adjust all network setting and check connection if you have connection problems.

- 1.Press  button to select “Network & Internet” in the settings menu.
- 2.Press  button to select: Wi-Fi/Add new network/Scanning always available/Proxy settings/IP settings.

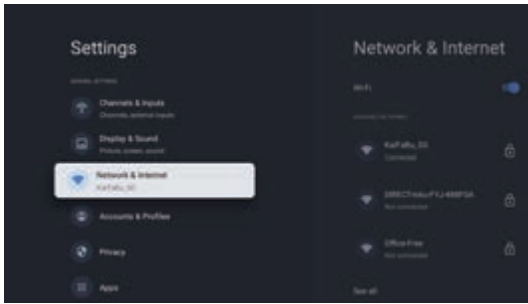


## System

1. Press **^/V** button select the options of About, Date & Time, Timer, Language, Inputs, Picture, Sound, Google Assistant, Reset and others.
2. Press **【OK】** to jump to the corresponding sub-option.





## About

 1. Press **^/V** button to check additional information such as System update, Device name, Restart, Status, and more.
2. Press **←** button to return to the previous menu.

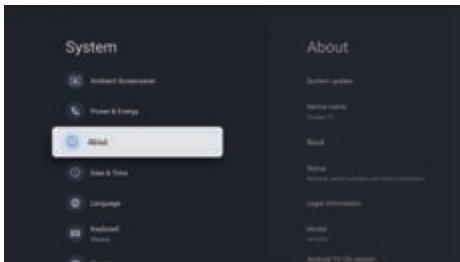


## Factory reset

  
If Factory reset is selected, it will erase all data from your device's internal storage, including: your Google Account, system and app data and settings, and downloaded apps.

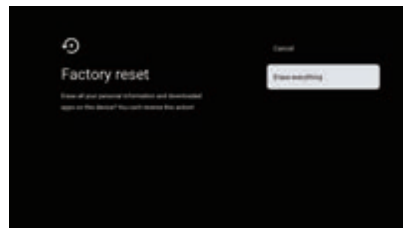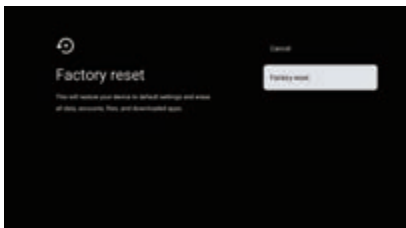


## TV Source setting

To enter TV source in Homepage:

 Press  button or Select "Live TV" on Homepage.

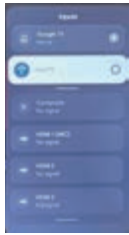


 Enter "Live TV" to search for TV programs via tuner, switch source etc.

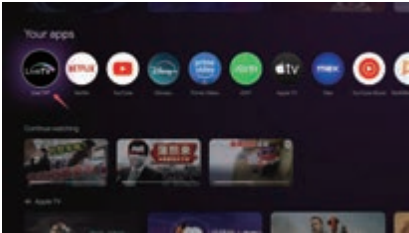

### Accounts & Profiles

 To have access and to download applications, you must sign in with a Google Account.

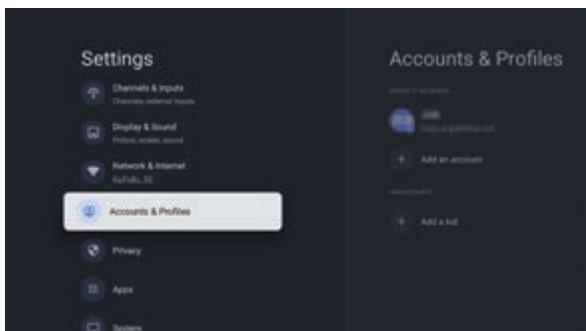

When signed into your Google Account, you will be brought to the home page. From here you can browse 400,000+ movies and TV episodes from across your streaming services — in one place, and organized by the genres and topics that interest you the most.



The above pictures are for reference only, please refer to the product for details.


# HOW TO RETUNE YOUR NCE GOOGLE TV

 ---


1. Press the SETTINGS button on your remote.




2. Select ALL SETTINGS on the top right-hand corner of your screen.

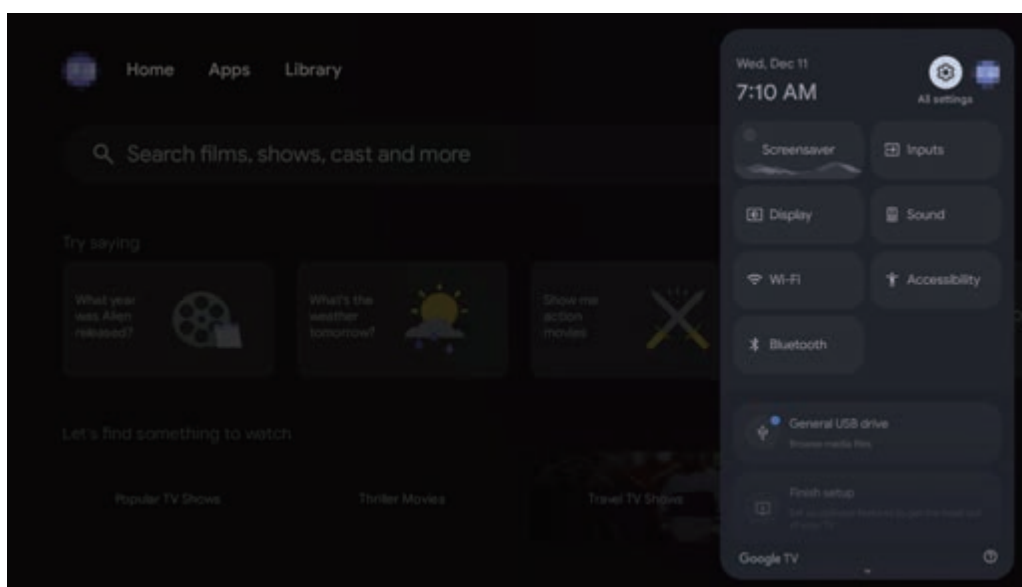

 
3. Scroll down to CHANNELS & INPUTS and press OK to confirm selection.

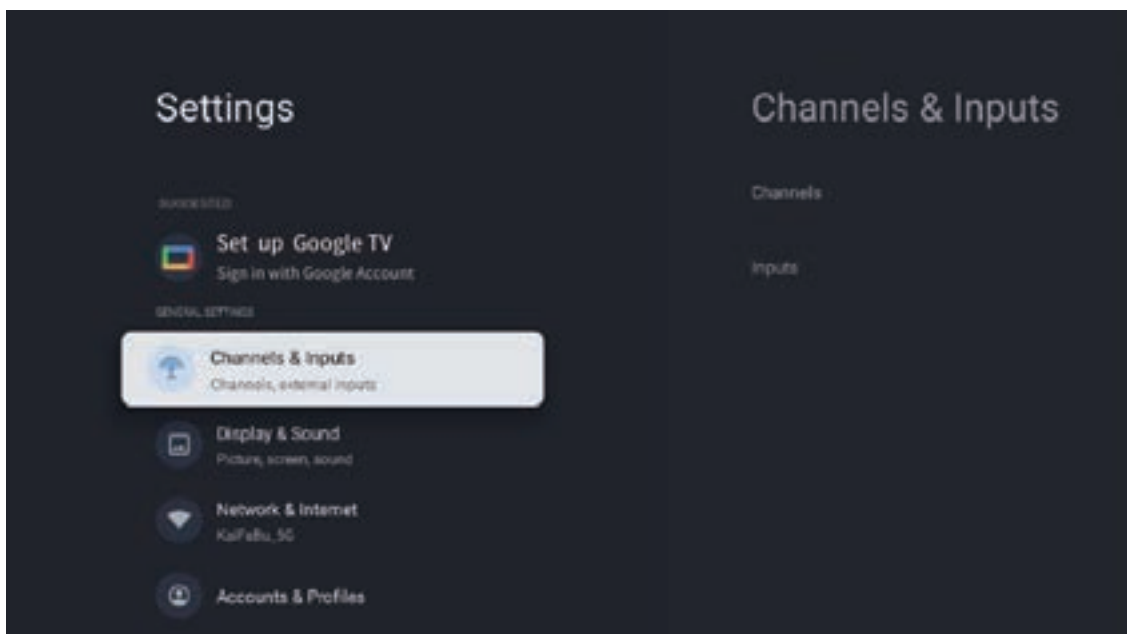

 
4. Select CHANNELS and press OK to confirm selection.

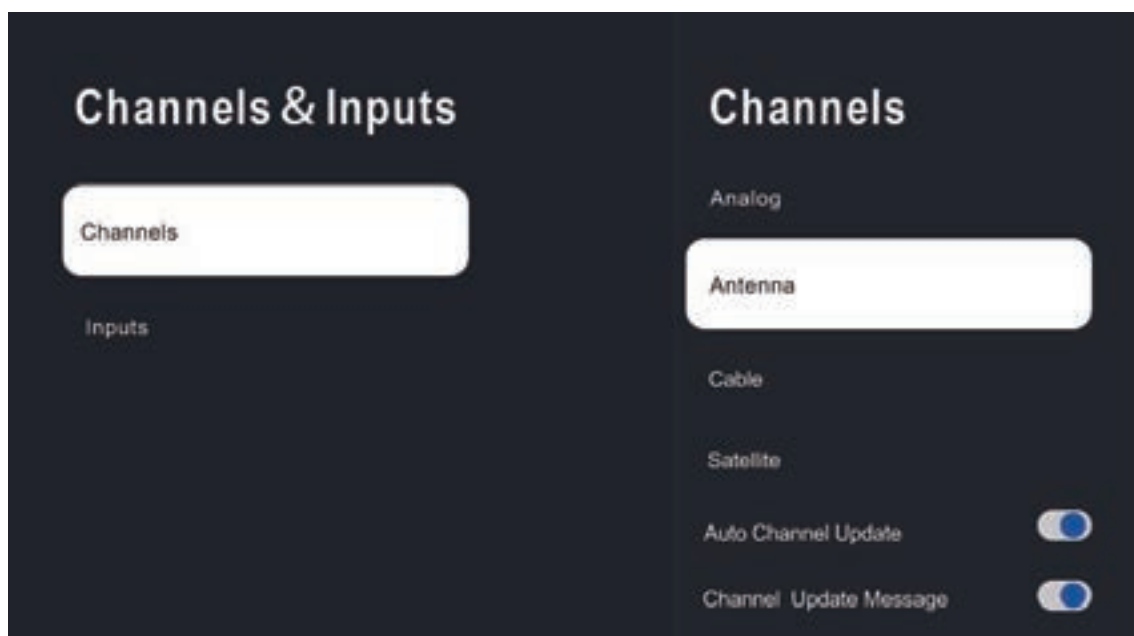

 
5. Select ANTENNA and press OK to confirm selection.

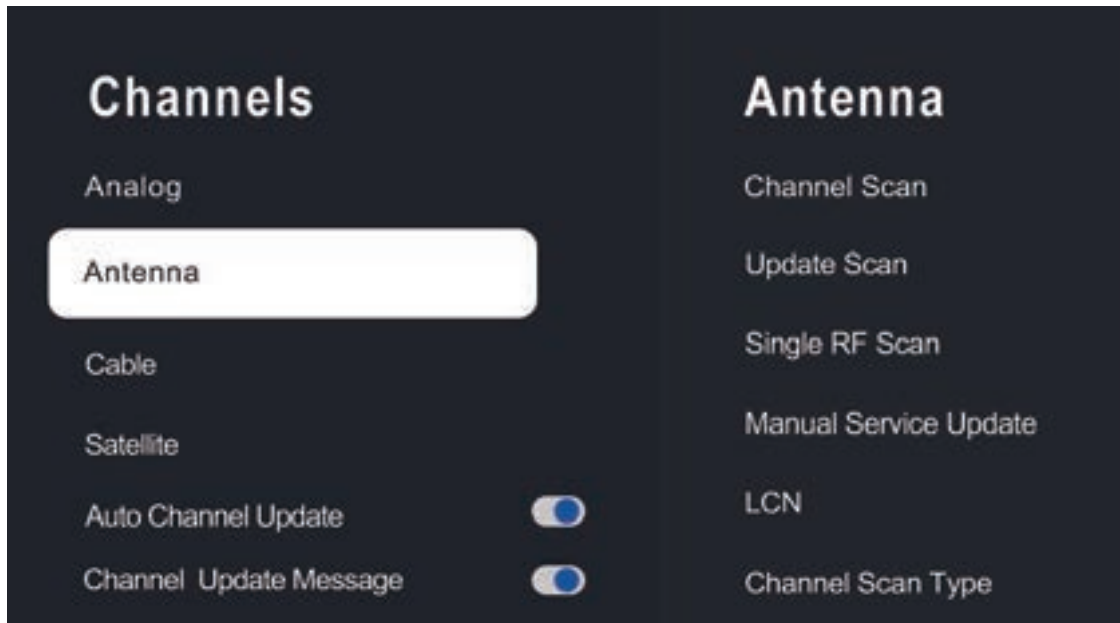

 6. Scroll down to CHANNEL SCAN and press OK to confirm selection.

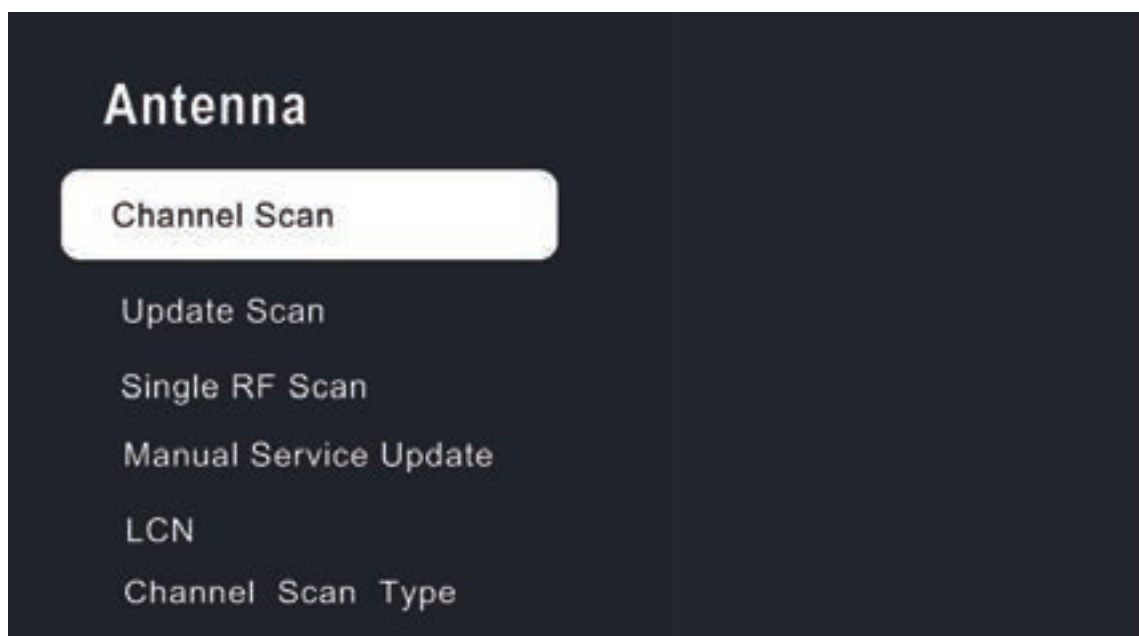

 7. Your NCE Google TV will now start to AUTO TUNE.

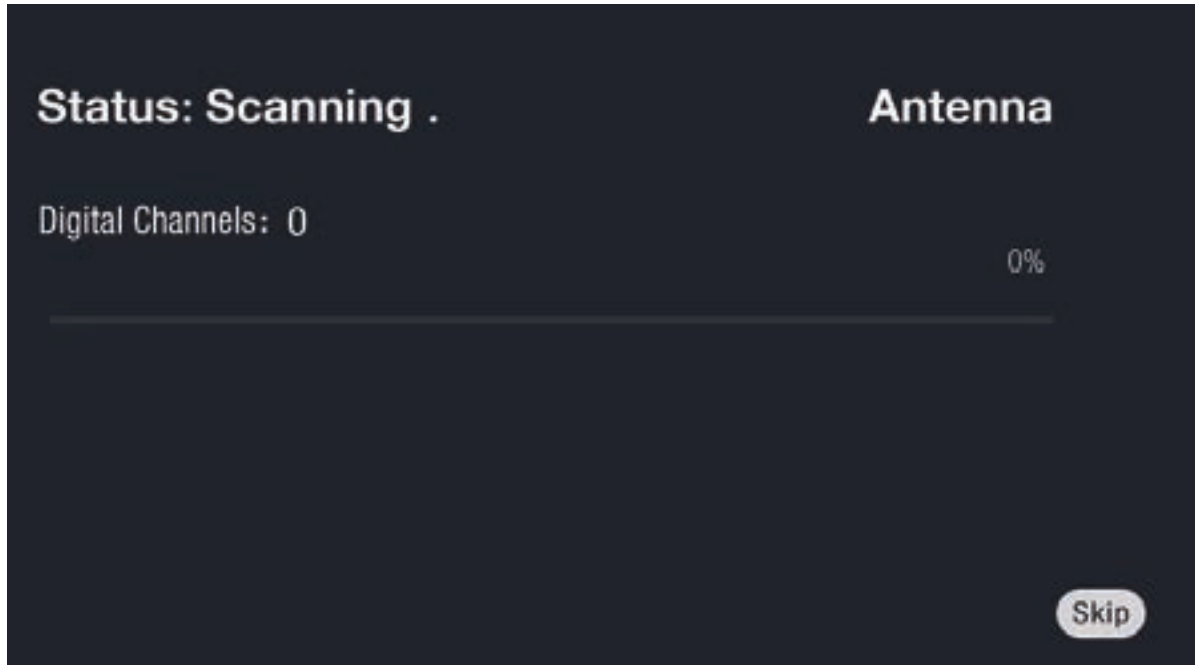

# HOW TO STUCK IN ATV MODE ON YOUR NCE GOOGLE TV


---

Method 1:

1. Press  button on your remote.



 2. Select Live TV and press OK to confirm selection.

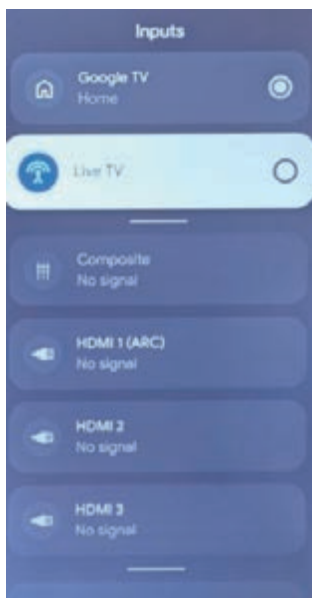

# HOW TO STUCK IN ATV MODE ON YOUR NCE GOOGLE TV

---

Method 2:

1. Press Live TV button on Homepage.



2. Select Broadcast.





FOR CUSTOMER SUPPORT  
PLEASE CONTACT YOUR DEALER

OR

EMAIL [NCEWARRANTY@NCE.COM.AU](mailto:NCEWARRANTY@NCE.COM.AU)

Monday to Friday -AEST 8:00AM - 5:00PM