

# DEVANTI®

 
## USER MANUAL

wine cooler


Model No:

WC-25C-8B-BK(BCW-25C)    WC-35C-12B-BK(BCW-35C)


WC-50A-18B-BK                      WC-70A-28B-BK

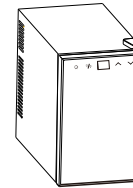

WC-25C-8B-BK(BCW-25C)

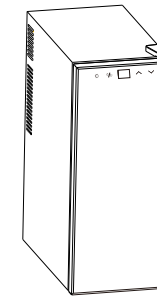 

WC-35C-12B-BK(BCW-35C)

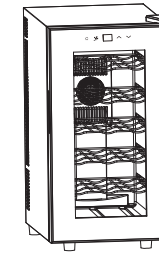 

WC-50A-18B-BK



WC-70A-28B-BK

### CONTENTS

•INDICATION OF PARTS.....	2
•TEMPERATURE CONTROL.....	3
•INSTRUCTION FOR USES.....	5
•VENTILATION & TROUBLE SHOOTING GUIDES....	6
•SAFETY & WARNINGS / DISPOSAL .....	7

---

Thank you very much for buying this product. Before using your new Wine cooler, please read this operation manual to ensure that you gain The maximum benefit from it.

**WARNING:**

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
5. To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions.
6. When positioning the appliance, ensure the supply cord is not trapped or damaged.
7. Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
8. Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
9. Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
10. Do not use electrical appliances inside the drink storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
11. Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
12. Children aged from 3 to 8 years are allowed to load and unload refrigerating appliances.
13. This appliance is intended to be used in household and similar applications such as
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses and by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments;
  - catering and similar non-retail applications.
14. To avoid contamination of drink, please respect the following instructions:
  - Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
  - Clean regularly surfaces that can come in contact with drink and accessible drainage systems.
  - Clean water tanks if they have not been used for 48 h, flush the water system connected to a water supply if water has not been drawn for 5 days.
  - If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.

 
Note: This appliance contains flammable foaming agent cyclopentane. Please avoid contact fire when you transport and use it.

Please ask professional for servicing when the machine broke down.


Please send it to your local appointed disposal station when you discard it.

**• INDICATION OF PARTS**


**WC-25C-8B-BK**

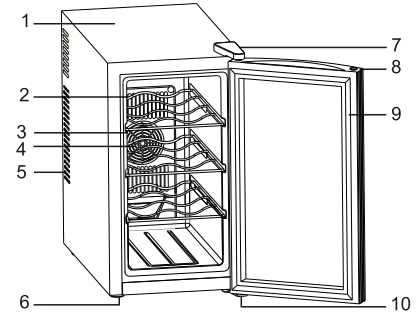


**WC-35C-12B-BK**

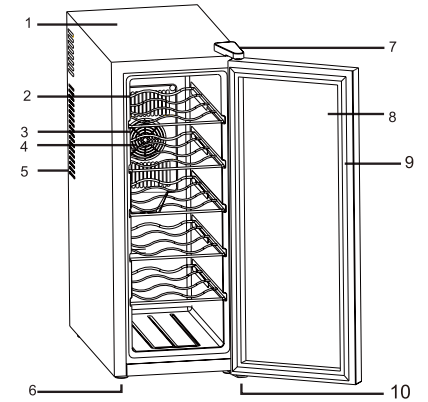 

**WC-50A-18B-BK**

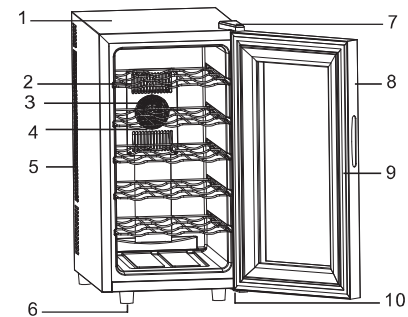 

**WC-70A-28B-BK**

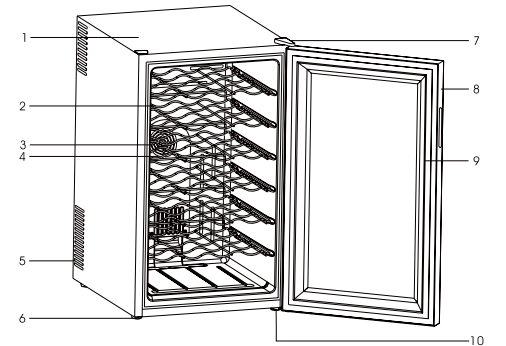 

1	Cabinet	6	Adjustable feet
2	Shelves	7	Top hinge / Cover
3	Cooling fan	8	Door
4	Cooling fan cover	9	Seal
5	Vents	10	Bottom hinge / Cover

## • TEMPERATURE CONTROL

The wine cooler should be installed in a place where the room temperature is between 23°-26°C. If the room temperature is above or below the recommended temperatures, unit performance may be affected. For example, installing the unit in extremely cold or hot conditions may alter the internal temperatures. The temperature range of your wine cooler may not be reached.


### Recommended temperatures

Red wine	14 - 18°C
Dry white wine	9 - 14°C
Rosé wine	10 - 11°C

### Wine cooler temperature ranges



Model No.	Setting range	Remarks
WC-25C-8B-BK	8-18°C	Room temperature at 23-26°C
WC-35C-12B-BK	10-18°C	Room temperature at 23-26°C
WC-50A-18B-BK	12-18°C	Room temperature at 23-26°C
WC-70A-28B-BK	12-18°C	Room temperature at 23-26°C


## CONTROL PANEL





 Press this key for two seconds to change the temperature display setting from degrees Fahrenheit to degrees Celsius.



## > SETTING THE TEMPERATURE CONTROL

➤ The wine cooler automatically locks the control panel 12 seconds after the last press on the  and  buttons.

To unlock the temperature control, it should press on the symbol of the Gear  for 2-3 seconds.

➤ The desired temperature can be set by pressing  or  on the control panel. The temperature being set increases by 1°C at a time on pressing , and reduces by 1°C at a time on pressing .

➤ When storing mostly red wine, the temperature must be set between 14° and 18°C.

➤ When storing mostly white wine, the temperature must be set between 9° and 14°C.

## Correct disposal of this product



This symbol on the product, or in its packaging, indicates that this product may not be treated as household waste. Instead, it should be taken to the appropriate waste collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by the inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council, your household waste disposal service, or the shop where you purchased the product.

## • SAFETY & WARNINGS

Handle with care and inspect regularly to ensure product is in good working order.  
If this product, power supply cord or plug shows any signs of damage: stop use, unplug the product and contact *your sales points for support*.

- Ensure appliance has adequate ventilation and is free of obstructions during operation.
- Do not use mechanical devices or other means to accelerate the defrosting process.
- Do not use electrical appliances inside the food storage compartments of the appliance.
- This appliance is intended to be used in households and similar environments such as;
  - staff kitchen areas in shops, offices and other working environments.
  - by clients in hotel, motels and other residential type environments.
  - bed and breakfast type environments.
  - catering and similar non-retail applications.
- Do not install the appliance in the laundry.
- The appliance must be positioned so that the plug is accessible.
- The appliance must be installed in accordance with national wiring regulations.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.  
Children should be supervised to ensure that they do not play with the appliance.
- Once the damage happens to the power cord, please stop using the product and contact with your sales points for repairing.

## • DISPOSAL

- Do not dispose this product as unsorted municipal waste. Follow the local regulations for the collection of such waste
- This appliance uses flammable and foaming agent, you should send it to the appropriate disposal station when needed.
- Keep the appliance away from fire or similar hazardous substance.
- Remove the door before disposing of the appliance.

## Notes


When using the wine cooler for the first time or when restarting it after a long stoppage, there may be several degrees difference between the selected temperature and that shown on the LED display. This is due to the time required to reach the set temperature and is normal.

## Capacity

WC-25C-8B-BK (BCW-25C)	8 standard bottles (750ml)
WC-35C-12B-BK (BCW-35C)	12 standard bottles (750ml)
WC-50A-18B-BK	18 standard bottles (750ml)
WC-70A-28B-BK	28 standard bottles (750ml)

 
Bottles come in different sizes, so the actual number that can be stored may vary.

## Internal light

The internal light can be switched on or off by pressing the button marked with the "Light" symbol .

The light automatically switches off after 10 minutes.

## • ELECTRIC DIAGRAM

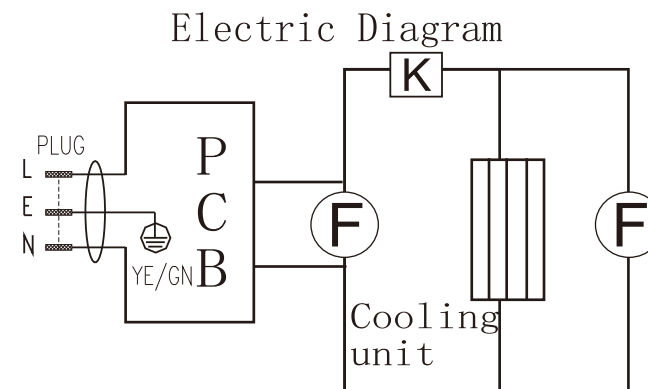

## • INSTRUCTION FOR USES

### **1, Note**

- 1, 1: Position your wine cooler so that the plug is accessible.
- 1, 2: Keep your wine cooler out of direct sunlight.
- 1, 3: Do not place next to heat generating appliance.
- 1, 4: Do not place directly on the ground. Provide suitable stand.

### **2, Very important:**

- 2, 1: The wine cooler will have better performance at ambient of 23-25 degree; We suggest the wine cooler be powered off if the ambient temperature is lower than 10 degree.
- 2, 2: After plugging the appliance, allow the unit to cool down for 2-3 hours before placing beverage into the cooler compartment.
- 2, 3: Ventilation is very important for this kind thermoelectric wine cooler; The inside PCB will be broken easily if the ventilation is bad; It will also reduce the life of the wine cooler.
- 2, 4: These models use a thermoelectric cooling system with automatic defrosting system, so there is no need to defrost it manually.

### **3, Power supply:**

- 3, 1: The wine cooler must be connected to a properly earthed socket in line with relevant valid country regulations before operating;
- 3, 2: Check the data label (which is on the side of the wine cooler) for voltage and frequency corresponds to your local one; If not, don't plug your cable into the socket;

## • VENTILATION

When putting a TE wine cooler, ventilation should be considered seriously, please refer to the following:

- 1, there should be left at least 200 cm<sup>3</sup> for ventilation
- 2, the distance between wall and wine cooler side should be at least 80~100mm
- 3, the bottom should be left at least 50mm for air flowing
- 4, air passing through must not be preheated
- 5, entire cooling system should be considered in the ventilation

## • TROUBLE SHOOTING GUIDS

Failure: no cooling

Possible reason	Action
No power	Check the electricity supply, or change a new plug
PCB broken	Replace a new PCB
Fan broken	Replace a new fan
Cooling module broken	Replace a new cooling module with silicone

Failure: poor cooling performance

Possible reason	Action
High ambient temperature	Adjust the room temperature at around 23-25°C
Poor instruction	Keep the door firmly closed until the temperature reach to the setting temperature
Poor ventilation	Install wine cooler according to our ventilation instruction
Poor gasket	Replace a new door gaske
Poor silicone	Change the silicone on the surface of the cooling module

Failure: noisy

Possible reason	Action
Dust	Clean the dust from the fan
Fan broken	Change to a new fan

Failure: frost or ice inside minibar

Possible reason	Action
No defrost	Stop working for at least one hour, then restart it
Low ambient temperature	Adjust the air-conditioner to be around 25degree