FURRION

ENTERTAINMENT SYSTEM

MODEL: DV5700S

QUICK START GUIDE



* Product picture for reference only

This quick start guide will help you install and use the device properly. For further support and to download the complete user manual please visit www.furrion.com/support.

What's in the Box


- DV5700S Main Unit
- Mounting Screws
- Trim Ring
- Harness
- Remote Control
- Warning Card
- Quick Start Guide
- Warranty Manual

NOTE: Product design and packaging may change without notice.

Setup

STEP 1: Connect your Device

Please connect according to following diagram for proper functionality.

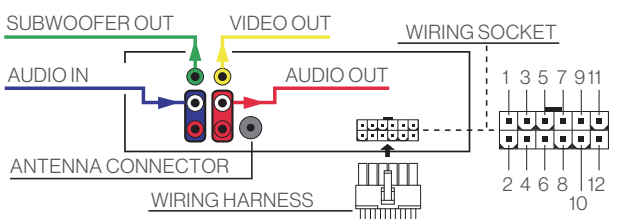


PIN NO.	COLOR	FUNCTION
1	GRAY	FRONT RIGHT SPEAKER (+)
2	GRAY/BLACK	FRONT RIGHT SPEAKER (-)
3	WHITE	FRONT LEFT SPEAKER (+)
4	WHITE/BLACK	FRONT LEFT SPEAKER (-)
5	GREEN/BLACK	REAR LEFT SPEAKER (-)
6	GREEN	REAR LEFT SPEAKER (+)
7	PURPLE/BLACK	REAR RIGHT SPEAKER (-)
8	PURPLE	REAR RIGHT SPEAKER (+)
9	BLUE	AUTO ANTENNA
10	RED	+12VDC IGNITION SWITCH
11	YELLOW	MEMORY +12VDC
12	BLACK	GROUND

STEP 2: Install Your Device

IMPORTANT: Before final installation, check by powering the stereo on to make sure unit operates properly.

Fix the unit with screws according to the following diagram.

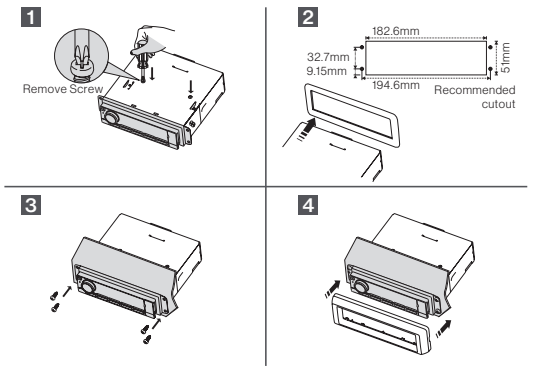

Furrion Innovation Center & Institute of Technology

● 52567 Independence Ct., Elkhart, IN 46514, USA ● Toll free:1-800-789-3341
● Email: support@furrion.com

©2007-2021 Furrion Ltd. Furrion® and the Furrion logo are trademarks licensed for use by Furrion Ltd. and registered in the U.S. and other countries.

For Patent Info: www.furrion.com/pages/patents

FURRION.COM

IG-FAV00063 V1.0

STEP 3: Prepare the Remote Control



Before use, remove the insulating sheet from the remote control as indicated.

BASIC OPERATION

Turn On/Off

Press ⏻ on the front panel to turn on the unit.

Press and hold ⏻ for 2 seconds to turn off the unit.


Select A Source

Press **MODE** on the front panel once or more to select TUNER, DISC (with a disc loaded), USB (with a USB storage device connected), CARD, AUX or BT mode.

Insert a Disc

Press ⏏ on the front panel to unlock and release the front panel. With the label facing up, insert a disc into the disc slot. Lift up to fix and lock the front panel.

Insert SD (MMC) Card

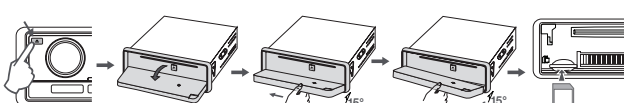

Detach the front panel to expose the SD (MMC) card slot, and insert a supported card.

Adjust Volume

Rotate the volume knob on the front panel to adjust volume.

Mute

Press **MUTE** on the front panel to mute sound output.

Press **MUTE** again to resume.

Set Clock

Press **CLK** on the remote control to display the clock on the LCD. Press and hold **CLK** till the hour digits flash on the LCD. Then press ▲/▼ on the remote control (or rotate the volume knob on the front panel) to adjust the hour.

Press **CLK** on the remote control to switch to minute setup and the minute digits will flash on the LCD. Press ▲/▼ on the remote control (or rotate the volume knob on the front panel) to adjust the minute.

Press **OK** on the remote control to confirm the setting.

Select A Preset EQ

Press **EQ** on the remote control once or more(or press and hold **SEL** on the front panel to select EQ and then rotate the volume knob on the front panel)to select Flat, Rock, Classic, Cinema or EQ Off.

Turn On / Off Loudness Effect

Press and hold **LOUD** on the front panel (or **LD** on the remote control) to turn on or off the loudness sound effect.

Select A Feature/Setting

Press **SEL** on the front panel once or more to select BASS (without EQ preset), TRE (without EQ preset), BAL or FAD.

Then rotate the volume knob on the front panel to select a feature / setting.