




BUSHMAN

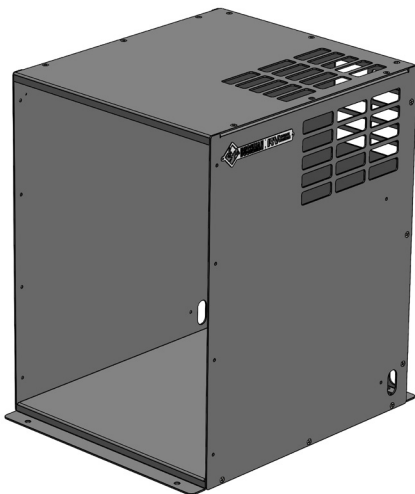

BUSHMAN 65LT/85LT/130LT FRIDGE ENCLOSURE INSTALL INSTRUCTIONS RV-BM65FE/BM85FE/BM130FE - UPRIGHT FRIDGE ENCLOSURES




Checklist - Fit Kit - 65LT/85LT

Qty:	
24	M6 x 16mm CSK Philips Head Screw Nylon (Ref.1)
Please check before assembly	


Checklist - Fit Kit - 130LT

Qty:	
26	M6 x 16mm CSK Philips Head Screw Nylon (Ref.1)
Please check before assembly	

① M6 x 16 CSK
Philips Screw

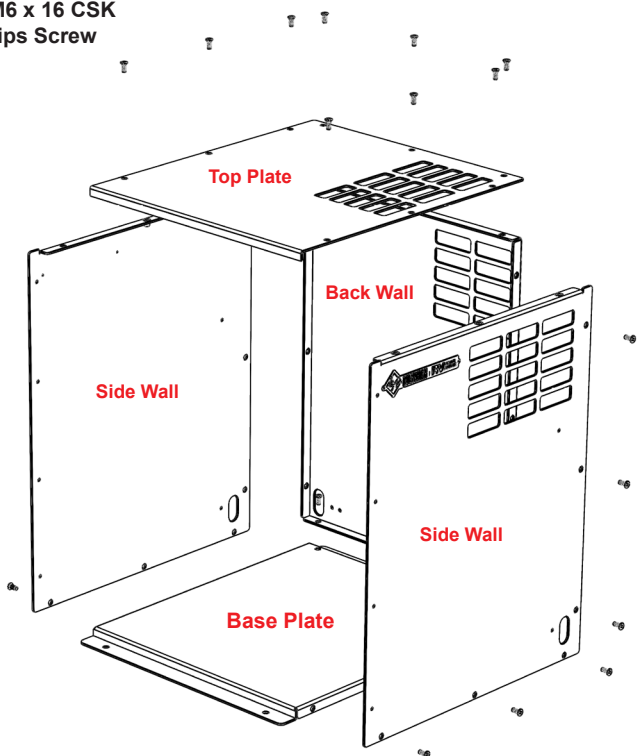

② Fridge Install

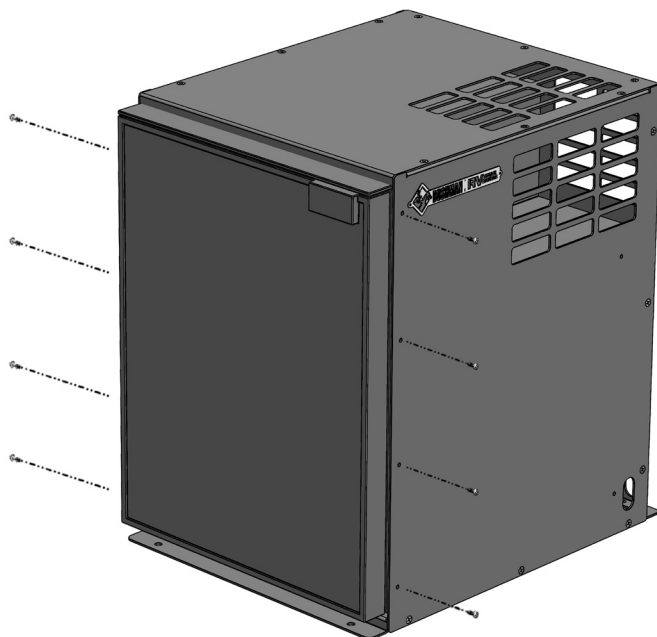

Fitting Instructions

Step 1: Lay out all parts on a flat surface.

- Start with screwing the Side Walls to the Base Plate using M6 x 16 CSK screws.
- Next install Back wall to side and Base Plate using M6 x 16 CSK screws.
- Install Top Plate using M6 x 16 CSK screws.

Step 2: Fit Bushman Fridge using supplied S/S Phil Drive Screws in Fridge Fitting Kit through pre punched holes in sidewalls (Ref. 2).

Step 3: Install Fridge Enclosure into vehicle using the mount holes.