


Cable Seals

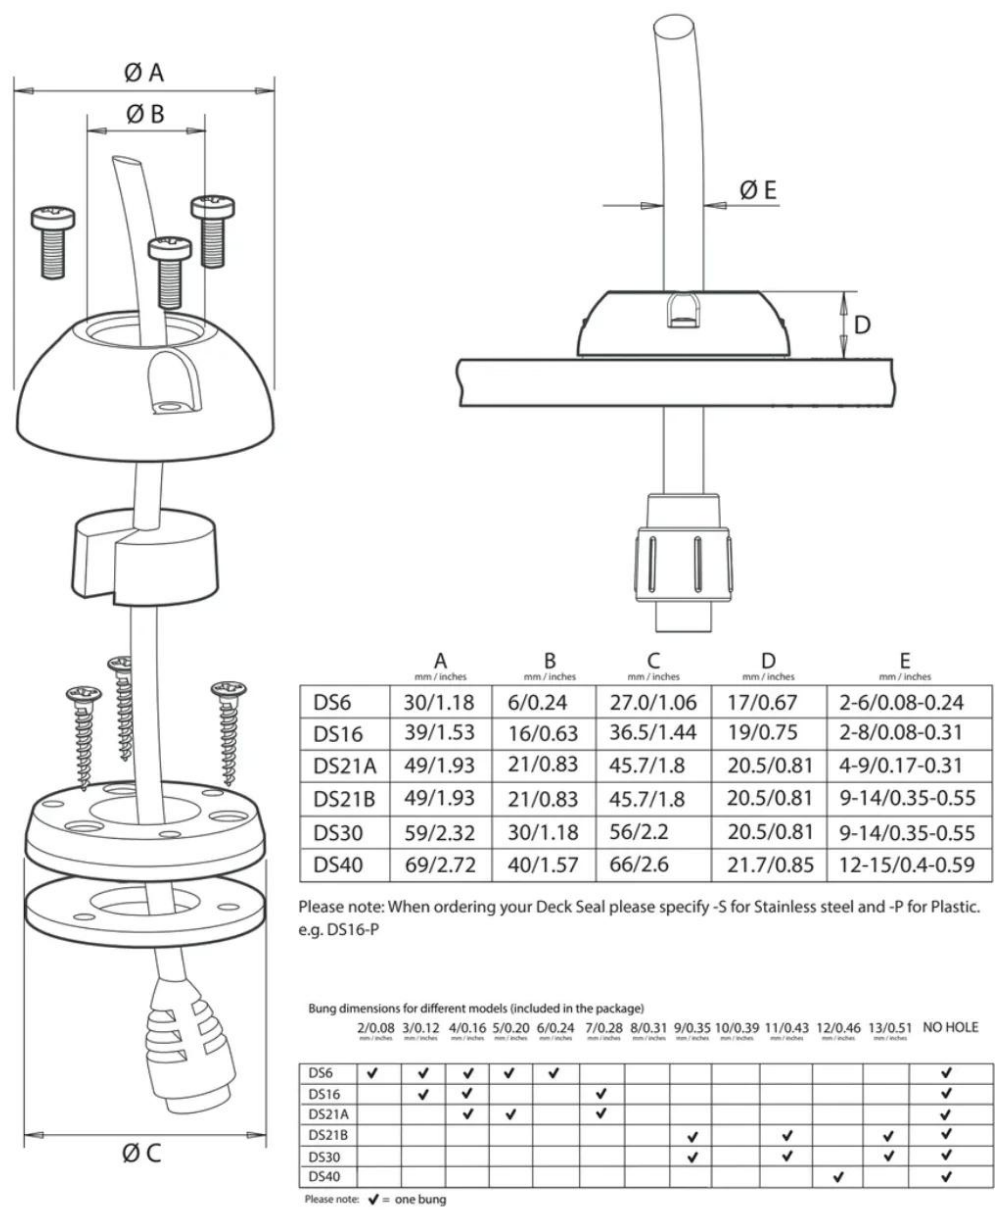


DS21A-P / DS21A-P-BLK* / DS21A-S
 DS21B-P / DS21B-P-BLK* / DS21B-S
 DS16-P / DS16-P-BLK* / DS16-S

21-07-2021 (Issue 1)

Installation Instructions

Parts List

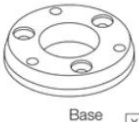
 Shell x1	 Base x1	 Gasket x1	 Self tapping screw DS21 No. 6X16 x3 DS16 No. 4X16 x3
 Bolt - (Black*) DS21 M4X10 x3 DS16 M3X10 x3	 DS21A Bungs x4	 DS21B Bungs x4	 DS16 Bungs x4

Tools Required


 Pozi Screwdriver	 Silicone
 DS21 - ø21mm (0.82") DS16 - ø16mm (0.62") Hole Saw	 ø2mm (5/64") / ø2.5mm (3/32") ø3mm (1/8") Drill Bit

Step 1: Choose bung closest to cable ø.

DE - Wähle Dichtung nahe dem Kabel ø.
 IT - Scegliere il passafili adatto al ø del cavo.
 ES - Elja el tapón con el diámetro más parecido al cable.
 FR - Choisissez le joint le plus proche du diamètre du câble.

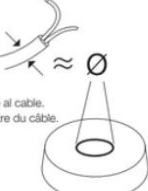

1a

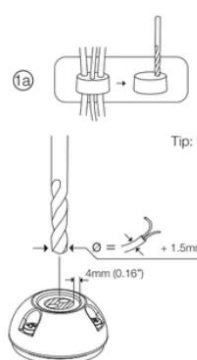


Tip: freeze before drilling

-18°C


4mm (0.16")

1b



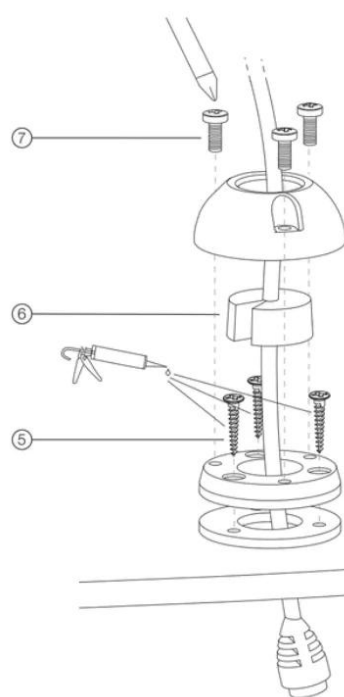

Step 2: Mounting



2

3 16mm (0.62")
21mm (0.82")

4

Suggested pilot holes:

Material	No. 4 Screw	No. 6 Screw
Soft Material e.g. plywood	2mm (5/64")	2.5mm (3/32")
Hard Material e.g. fiberglass, acrylic, hardwoods	2.5mm (3/32")	3mm (1/8")

