

Fitting Instructions



SKU

PRODUCT

T7C690

Mitsubishi Pajero (1999 - on)



Scan for latest version of these instructions


SPECIFICATIONS

- Towbar Class: Standard Duty
- Towing Capacity: 2500kg

IN THIS GUIDE

- Fitment Instructions
- Torque Settings
- Warranty Info

Towbar Fitting Instructions

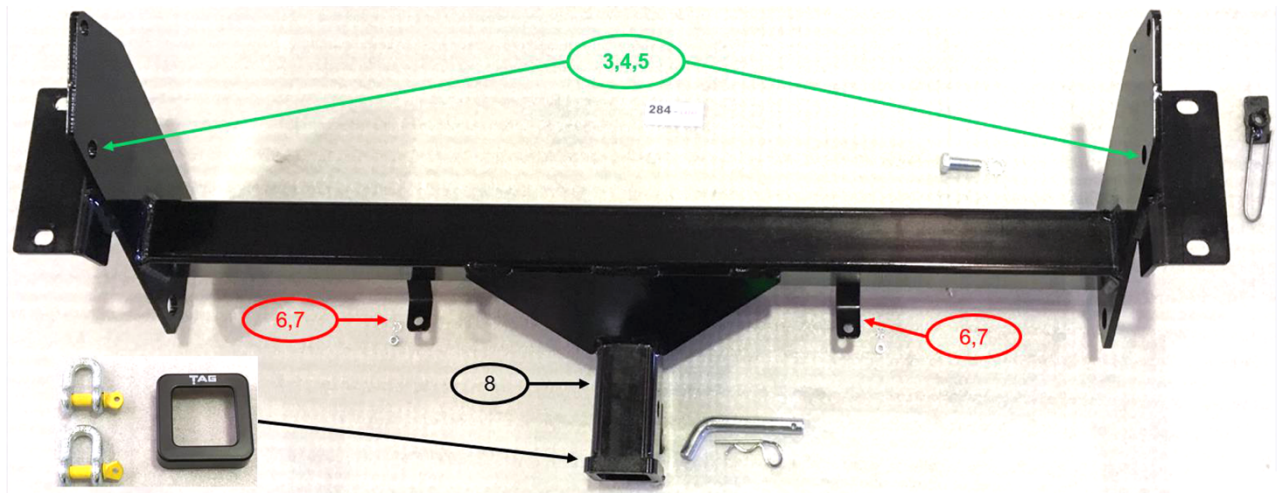

<u>Item Number</u>	<u>Item</u>	<u>Quantity</u>
1	Towbar – T4C284 / T7C690	1
2	Ball Mount – L4240	1
3	M12 x 1.25 x 35 Bolt	2
4	M12 Shake proof washer	2
5	M12 x 1.25 Nut on plate	2
6	M6 Spring washer	2
7	M6 x 1 Nut	2
8	Class 4 Pin	1

Tools Required: Spanners, Screwdriver, Sockets, Torque wrench

Step-By-Step Instructions

Warning:

- This product is for towing purposes only and must only be loaded as shown in your vehicle Owner's Manual.
- This towbar is NOT to be drilled, cut, welded, or modified in any way.
- Check behind chassis rail and body panels before drilling to ensure no hazards are present
- All load ratings shown are under the assumption your trailer has a functional braking system installed
- When installed in positions other than the one depicted in these instructions the Tow Ball Mount may interfere or obstruct certain features of your vehicle (tailgate opening, Chassis clearance, etc.)

General:

- Before fitting this towbar read fitting instructions and check installation hardware is correct.
- Check that the towbar is suitable for the vehicle and be wary of any changes to the vehicle design that may conflict with the fitting of this towbar. (Tray, Canopy, Suspension etc.)
- After drilling, blow any filings clear, remove any swarf and treat exposed metal with a rust inhibitor.
- The high tensile fasteners supplied with this product are an integral feature to achieving the specified rating, if replacement is required ensure that fasteners of the same grade (8.8) & quality are used. Contact an authorised TAG distributor or the TAG fitment centre - (07) 3208 3022 - if further information is required.

Towbar Maintenance and Care:

It is recommended, when not in use, the Tow Ball Mount assembly and class 4 Pin and Clip is stored inside the car away from moisture to prevent standing water from forming rust. Inspect to ensure, on regular basis, fasteners are torqued to the specifications below and in good condition.

**Ensure that the fitting instructions are read and understood prior to fitment
Place these instructions in the vehicle's glovebox after installation is completed**

Step 1. Remove Shipping Hook

- a. Remove tie down support frame via 4 x M12 bolts on underside of chassis rails, 2 x M12 bolts located on the outside horizontal face of chassis rails & 2 x M12 bolts located on the inside horizontal face of chassis rails.
- b. Lower the air condition box located on the driver's side via 3 x M 6 screws x 20 screws this will allow better access to the horizontal bolts (if fitted not all vehicle variants will have it fitted).
- c. Don't remove the forward most bolt completely from chassis rails, just enough to lower the tie down support frame.
- d. Retain the bolts for fitment of tow bar.
- e. Discard the tie down support frame

Step 2. Fit Towbar

- a. Lift tow bar up to chassis & align with captive nuts on the underside of chassis rail.
- b. Support tow bar with suitable jack stands.
- c. Insert vertical bolts loosely first.
- d. Fit 2 tapped plates on wire to forward most bolts loosely each side.
- e. Fit rear horizontal bolts loosely.
- f. Fasten all bolts to torque specification on page 2.
- g. Refit air condition box if removed not all vehicle variants will have it fitted.
- h. Apply plastic hitch cover.
- i. Insert Ball mount into receiver & secure with the pull pin & clip.

Towbar Fitting Instructions



Step 3. Apply Compliance Label

- a. Apply one of the compliance labels to the pillar of the driver's door. Leave the remaining label & the fitting instructions in the vehicle handbook.



Torque table for bolt tightening

Metric GRADE 8.8	UNC GRADE 8
M6 – 12.5 Nm	3/8 – 50 Nm
M8 – 30 Nm	1/2 - 125 Nm
M10 – 60 Nm	5/8 – 245 Nm
M12 – 103 Nm	
M14 – 167 Nm	
M16 – 270 Nm	

TAG Warranty Statement

SWD warrants your TAG Towbar for its full product life under the following conditions:

- You can show proof of purchase.
- The towbar has been correctly installed by a suitably qualified installer.
- The towbar has not been modified or abused in any way and has only been used for the purpose intended.
- The towbar was not fitted second hand to your vehicle.

The extent of this warranty includes materials and workmanship used in the manufacture of the towbar and is to the equivalent value of current, full replacement cost.

Nothing stated or implied in this warranty limits in any way, the statutory rights that you may have.

To make a claim visit the original installer in the first instance or, if you are unable to or are not satisfied with their help, then contact us direct by phone on 1300 669122 or visit www.swd.com.au