


Anti-Theft plug and loom pin out configurations

Main loom plug pin out configuration from Anti-Theft unit.


Wire AWG Rating

	14		18	18	18	18	18	18
	14	20	18	24	24	24	24	
	14	20	18	20	20	24	24	14

GPS Pin Outs

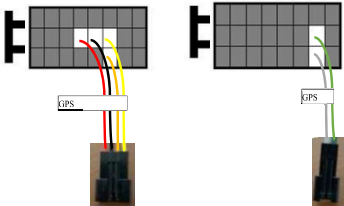


View from back of connector

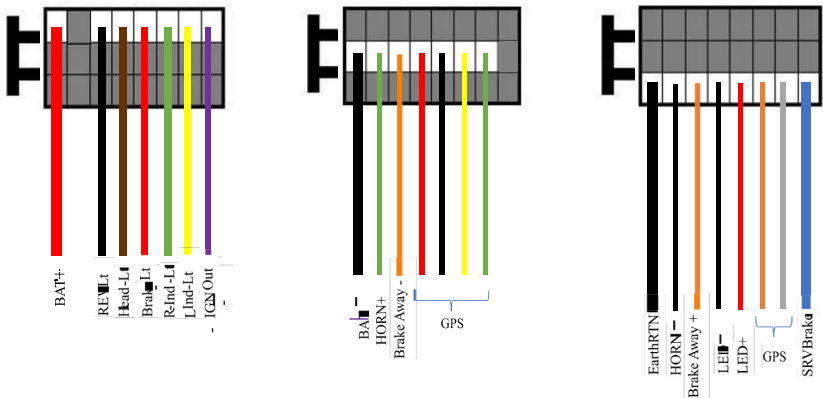

Loom end pin out configuration

Duetsche Connector Pin Outs

Image	Part #	Pin 1	Pin 2	Pin 3	Pin 4	Pin 5	Pin 6	Pin 7	Pin 8
	DT04-2P	LED +	LED -						
	DT06-2S	Break Away +	Break Away -						
	DTP06-2S	SRV Brake	Earth RTN						
	DT06-08SA	HRN -	REV-Lt	Brake-Lt	IGN-Out	L-Ind-Lt	R-Ind-Lt	Head-Lt	HRN +

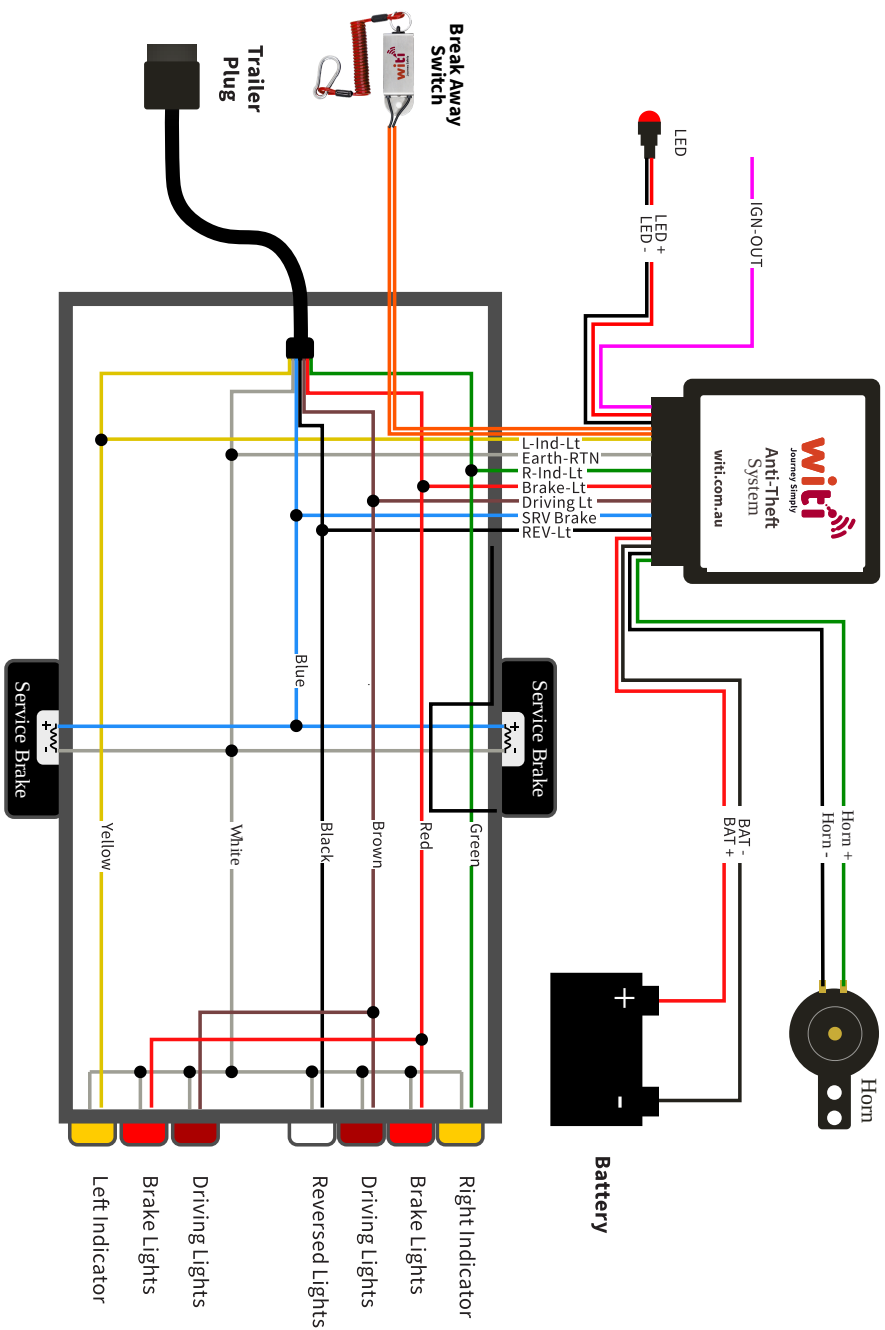

Colour		Label	Function
Yellow		L-Ind-Lt	Left Indicator
Green		R-Ind-Rt	Right Indicator
Red		Brake - Lt	Brake Light
Brown		Head - Lt	Park Light & Markers
Black		Rev - Lt	Reverse Lights
Blue		Sr - Brake	Electric Brake Output
White		Earth - Rtn	Earth Return
Purple		IGN - Out	Ignition Feed - Not used on WiTi Ar
Orange		Brk - Away	Break Away Switch Loop
Green		Horn +	Alarm horn positive output.
Black		Horn -	Alarm horn negative output.
Red		LED +	Alarm Status LED 3.3V+
Black		LED -	Alarm Status LED 3.3V-
Red		BAT +	12V+ connect to positive terminal on house battery and protect with 30A fuse.
Black		BAT -	NEG connect to negative terminal on house battery